## CRITICAL SPARES & MAINTENANCE TRAILER GUIDE





PUMPS AUSTRALIA BETTER BY DESIGN



1800 790 915



pumpsaustralia.com.au

## TRAILER CRITICAL PARTS LIST



Part No.	Description
h0089	Hitch mechanical override galvanised
b0031	Hydraulic galvanised calliper
b0033	Disc 6 stud landcruiser
b0042	Bearing kit slimline
h/dsjw	Heavy Duty Swivel Jockey Wheel
a0009	Axle 66" /1650mm x 45mm Square SL
n0201	12mm x 180mm U-Bolt Kit for 45mm
h0209	9 Leaf double eye spring 60mm wide

## TRAILER MAINTENANCE SCHEDULE



Item	Fuction Required	Inspection Required
Lights	Test that all Lights are Operational	Before Each Tow
Tyre Pressure	Set to 60PSI	Before Each Tow & Every 6 Months
Pintle Hook	Check to Capacity & Verify that the Retaining Pin is Properly Inserted	Before Each Tow
50mm Hitch	Ensure Latch is in Correct Locking Position	Before Each Tow
Safety Chains	Check that they are Properly Attached	Before Each Tow
Wheel Nut Indicators	Check all Indicators are Present & in Correct Positions	Before Each Tow
Tyre Condition	Inspect for Cuts, Wear Bulging etc.	Before Each Tow
Wheels	Inspect for Cracks, Dents, Distortion & Other Signs of Wear	Before Each Tow
Wheel Nuts	Tighten to Manufacturer Specified Torque Values	Every 6 Months
Wheel Bearings & Cups	Inspect for Corrosion or Wear Clean & Repack	Every 12 Months or 10,000Kms
Safety Decals	Check that Decals are Legible & Not Peeling at Edges	Before Each Tow & Every 12 Months
Reflectors	Check for Cracks	Every 12 Months
Frame Welds	Check all Connections are electrically & Mechanically Sound. Check for any exposed Conductors	Every 12 Months
Electrical Harness	Check all Connections are electrically & Mechanically Sound. Check for any exposed Conductors	Every 12 Months
Leaf Springs	Check for Excessive Wear or Cracks	Bi-Monthly
Brakes	Check for Cable Quality & Tension.	Monthly
	Check Fittings for any Wear	Monthly

## CRITICAL SPARES & MAINTENANCE TRAILER GUIDE





